

# INDEX

## A

Air filter ..... 30-32  
 Alternator, inner rotor ..... 182-184  
 Alternator, outer rotor ..... 176-182, 300  
 Axle rear  
     ATC70 ..... 219-224  
     1970-1978 ATC90, 1979-1983  
         ATC110 ..... 226-230  
     1984 ATC110, ATC125M ..... 231-236  
 Inspection ..... 236

## B

Battery ..... 16-18  
 Brakes  
     Cable ..... 261-263, 329-333  
     Front brakes ..... 253-257, 267, 329-333  
     Maintenance ..... 27-29  
     Pedal ..... 263, 268-269, 333  
     Rear brakes ..... 14, 257-261, 329  
 Breaker point ignition ..... 41-45

## C

Cam chain and tensioner ..... 37, 72-76, 273, 275-279  
 Carburetor  
     Adjustment ..... 46-47, 163-166, 296-297  
     Cleaning and inspection ..... 162-163  
     Disassembly/assembly ..... 158-162  
     Operation ..... 156  
     Removal/installation ..... 156-158  
 Centrifugal oil filter ..... 20-21  
 Charging system ..... 174-175, 300  
 Clutch  
     Adjustment ..... 29, 269  
     Assembly/installation ..... 110-114, 117-120  
     Centrifugal clutch ..... 285  
     Inspection ..... 120-121  
     Operation ..... 107  
     Release mechanism ..... 121  
     Removal/disassembly ..... 107-110, 114-117  
 Compression test ..... 38-39  
 Control cable ..... 22-24  
 Crankcase and crankshaft ..... 86-91, 281  
 Cylinder ..... 76-78  
 Cylinder head and camshaft ..... 56-69, 275

## D

- Drive chain ..... 21-22, 237-239, 267, 322-323
- Drive sprocket ..... 125-128

## E

## Electrical system

- Alternator ..... 175-184, 300
- Battery ..... 16-18
- Charging system ..... 174-175, 300
- Ignition, contact breaker point ..... 186-190
- Ignition coil ..... 195-196, 304-307
- Ignition, capacitor discharge ... 190-195, 303-304
- Ignition, solid state ..... 273
- Lighting system ..... 199-201
- Rotor testing ..... 184
- Starter ..... 197-198
- Starter solenoid ..... 198
- Stator coil ..... 184-185, 300-301
- Switches ..... 201-203
- Troubleshooting ..... 15
- Voltage regulator/rectifier ..... 185-186, 302

## Engine

- Break-in ..... 101
- Cam chain/tensioner ..... 72-76, 275-279
- Cooling ..... 51
- Crankcase cover ..... 85-86, 280-281
- Crankcase/crankshaft ..... 86-91
- Crankcase halves, joining ..... 91-94
- Crankcase halves, splitting ..... 84
- Cylinder ..... 76-78
- Cylinder head and camshaft ..... 56-65, 275
- Electric starter gears/
  - crankcase cover spacer ..... 91-94
- Oil pump ..... 82-85, 279
- Piston, piston pin and piston rings ..... 78-82
- Recoil starter ..... 94-101, 281-284
- Removal/installation ..... 54-56
- Tune-up ..... 36-47, 272
- Valves and
  - valve components ..... 69-72, 272-273
- Exhaust system ..... 170-172, 298-299
- External shift mechanism ..... 121-125

## F

- Fasteners ..... 5-7
- Fenders ..... 334-338

- Fork, front ..... 215-219
- Frame ..... 150-151
- Fuel system
  - Carburetor ..... 156-166, 296-297
  - Choke cable ..... 168-169
  - Fuel filter ..... 32
  - Fuel line inspection ..... 34
  - Fuel tank ..... 169-170, 297-298
  - Fuel tank ..... 169-170
  - Throttle cable ..... 166-168, 297
- Fuse ..... 203

## H

- Handlebar ..... 212-215, 312-315
- Headlights ..... 200
- Hub, front ..... 207-212, 310-312

## I

## Ignition system

- CDI ..... 190-195, 303-304
- Coil ..... 195-196, 304-307
- Condenser ..... 189
- Contact breaker point ..... 41-45, 186-189
- Solid state ..... 273
- Timing ..... 42-45, 158-160
- Internal shift mechanism ..... 142-144, 285-294

## L

- Lighting system ..... 199-201
- Lubrication (see Maintenance)

## M

## Maintenance

- Air filter ..... 30-32
- Battery ..... 16-18
- Brake adjustment ..... 27-29, 267-269
- Clutch adjustment ..... 29, 269
- Drive chain ..... 24-26, 267
- Fuel filter ..... 32-34, 271
- Fuel line ..... 34-35

Lubrication .....	18-24, 267
Oil change .....	18-20
Service intervals .....	15, 266
Spark arrestor .....	35, 271-272
Steering .....	35
Storage .....	47-48
Throttle lever adjustment .....	19-30
Tires and wheels .....	16, 266
Wheel bearings .....	35
Muffler .....	114-116

## O

Oil change .....	18-20
Oil pump .....	82-85, 279

## P

Painting .....	251
Parts replacement .....	4
Pistons, piston pin and piston rings .....	78-79

## S

Safety .....	7
Serial numbers .....	7
Shifter .....	152
Spark arrestor .....	35
Spark plug .....	39-41
Starting system .....	196-199
Stator coil .....	184-185
Steering .....	215-219
Knuckle .....	320-322
Shaft .....	315-318

Subtransmission .....	144-153
Switches .....	201-203

## T

Taillight .....	200
Throttle .....	166-168, 297, 315
Timing, ignition .....	42-45
Tires .....	16, 243-250, 266
Tools .....	3-4
Transmission/internal shift mechanism	
Preliminary inspection .....	128-129
3-speed, 70 cc .....	129-133
4-speed, 70 cc .....	133-138
4-speed, 90-125 cc .....	138-142

## Tune-up

Breaker point service .....	41-45
Cam chain adjustment .....	37-38, 272
Carburetor adjustment .....	46-47
Compression .....	38-39
Fuel drain .....	28
Fuel valve .....	28
Ignition timing .....	23-24, 158-160
Solid state ignition .....	45-46, 273
Spark plug .....	39-41
Throttle cable .....	26, 161-162, 297
1985 and later tune-up information .....	272
Valve adjustment .....	36-37, 272-273

## V

Valves .....	36-37, 272-273
--------------	----------------

## W

Wheel, front .....	206-207, 270-271
Wheel, rear .....	219
Wheels .....	266
Wiring diagrams .....	end of book

Copyright of Honda ATC, TRX, FOURTRX 70-125, 1970-1987 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.